



Global 3.0/6.0 series

Front control, Rear control, Pod
Instruction manual

Tianjin FUBER Technology Co., Ltd

Create ship power equipment supporting products with first-class user experience

Use instructions

Before using the product, please read this manual fully to understand the correct and safe operation method. The use of this product represents that you have fully read and agreed to the terms and safety matters in this manual. The Technology is not responsible for any property damage or personal injury caused by operations not complying with the provisions of this manual.

Use the legend

When reading this manual, please refer to the following figure legends:

(1) 、  Important

(2) 、  instructions

CONTENTS

01	Product features
02	Appearance Ports
03	Installation Instructions
04	Start Operation Instructions
05	Shutdown Operation Instructions
06	Operating Instructions For Raising The Fuselage
07	Disassembly And Instructions For Sacrificial Anode
08	Fault Protection And Recovery Operation Instructions
09	Storage Instructions
10	Maintenance And Repair Instructions



01 / Product Features



warning:

To avoid product losses caused by improper operation, please read all the operation instructions and safety information in this manual first, and then use FUBER products. For more product information, please log in to: www.sea10000.com for inquiries.


- 1、 The display screen shows real-time operation information.
- 2、 The emergency safety switch ensures safety.
- 3、 The rudder lever type throttle operates smoothly.
- 4、 The battery power alarm reminds you.
- 5、 Deep-sea grade anti-corrosion coating.
- 6、 Built-in GPS positioning.

02 / Appearance Ports

- ① Power point
- ② Display screen
- ③ Magnetic suction safety buckle
- ④ Fixed main seat
- ⑤ Accelerograph handle
- ⑥ Tightening handle
- ⑦ propeller
- ⑧ Motor module
- ⑨ Drivemodule




03 / Installation Instructions

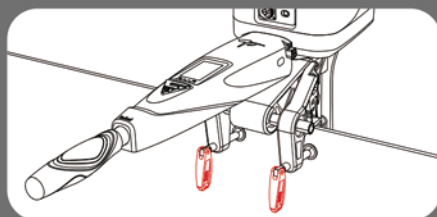


Front control stern control

- 1 Hang the product on the hanging plate on the stern plate of the ship used to fix the outboard motor and rotate the handle of the locking clamp.

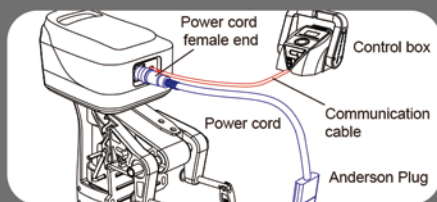

- 2 Front control version:
For the female end of the waterproof connector of the power cord, plug it into the male end of the power connector at the handle end of the product and rotate to lock it (refer to the picture below). Connect both ends of the communication cable to the product and the control box respectively.

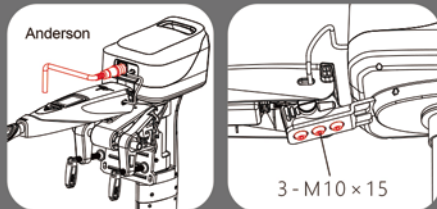

- 2 Stern control version:
For the female end of the waterproof connector of the power cord, plug it into the male end of the power connector at the handle end of the product and rotate to lock it

Must-read before installation.


(Includes front control/ stern control/ pod.)



- a. Avoid battery short circuit when connecting.
- b. Once the power cord or communication cable is interrupted, the outboard motor will stop working.




- a. When installing, ensure that the connector is dry to prevent short circuits.
- b. Please clean the connection connector once every three months.
- c. During use, if poor contact is found, it is recommended to check the connection and fastening of each terminal.

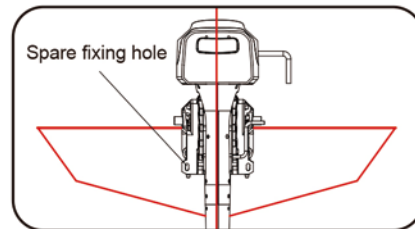


Please be sure to fix this product on the central axis of the ship. If your ship is asymmetrically designed, please consult an authorized dealer of FUBER Technology to adjust the appropriate installation position.

For long-term continuous use, it is recommended to use bolts to connect the equipment from the spare fixing holes to the hull to enhance the locking effect.

03 / Installation Instructions Pod



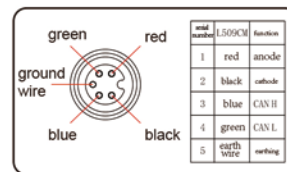


Female end of wiring harness (Figure 1)

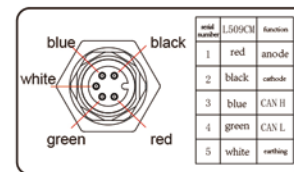

Male end of control box (Figure 2)




Note: The flatness requirement of the ship board is 0.1mm and the roughness is 3.2μm.

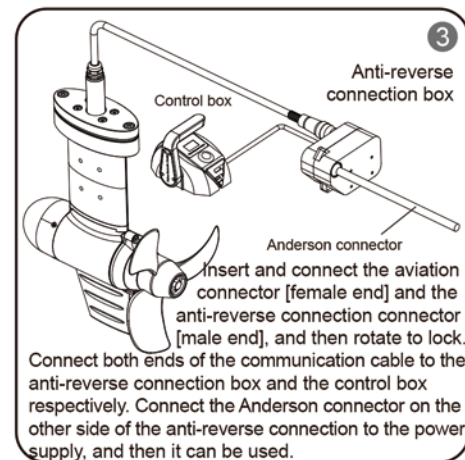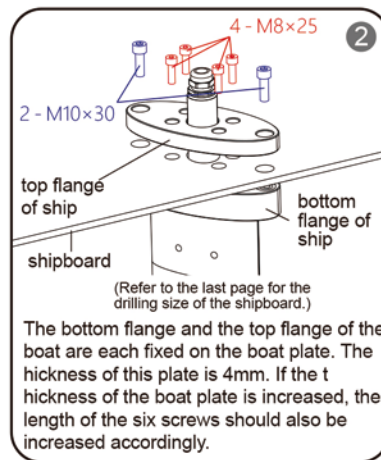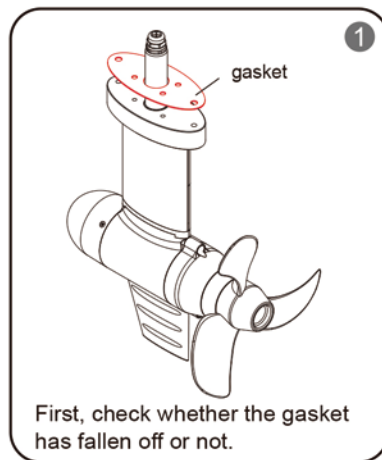

03 / Installation Instructions

Azimuth podded thruster

Note: The flatness requirement of the ship board is 0.1mm and the roughness is 3.2 μ m.

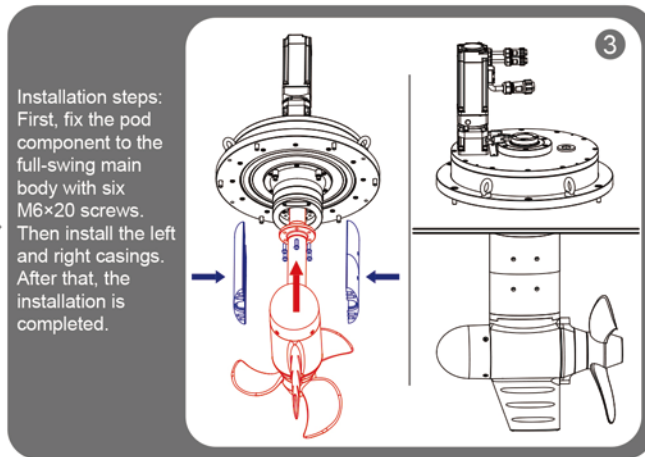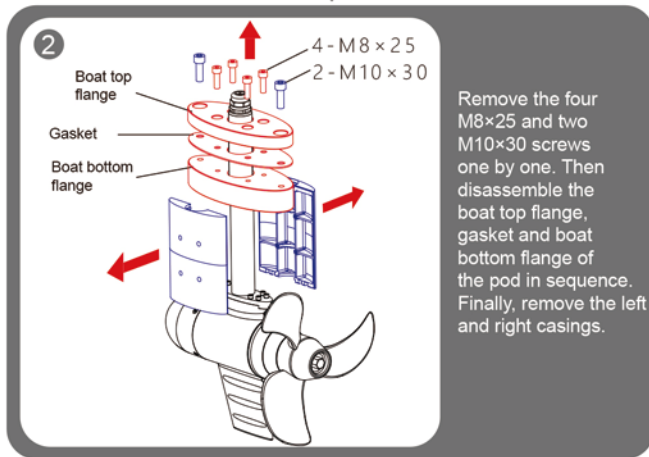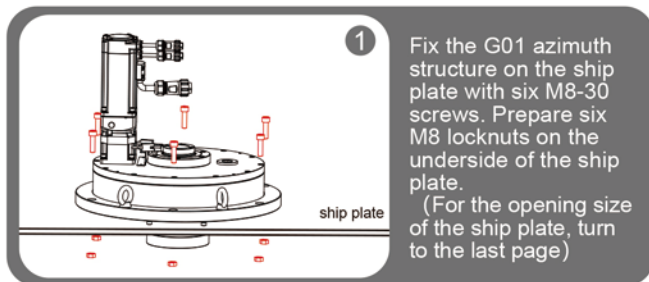

Must-read before operation (including front operation/rear operation)



Please check the following items before starting:

- a. Please confirm whether the propeller is locked.
- b. Please ensure that the product is completely locked to the stern plate and in the correct position.
- c. Please confirm that the throttle lever has been rotated to the zero throttle position.
- d. Please check whether the throttle lever can rotate smoothly.
- e. Please check whether each connection is in good condition and free from aging.
- f. Check whether the power connection part is dry to avoid short circuits.




- a. When starting the machine, personnel must stay away from the propeller to avoid scratches.
- b. Before connecting the power cord, please ensure that the power cord is dry.
- c. For safety considerations, please connect the installation switch lanyard to the personnel's wrist or personal clothing throughout the process.
- d. Please pay attention to the magnetic field of the safety switch and keep it away (about 50cm) from items sensitive to magnetism (such as regulators, medical equipment).
- e. Please keep the safety switch away from easily disturbed electronic products.
- f. Please keep the safety switch away (about 50cm) from valuable items sensitive to magnetism such as magnetic cards.

04 /

Start Operation Instructions

04 / Start Operation Instructions

Rear control

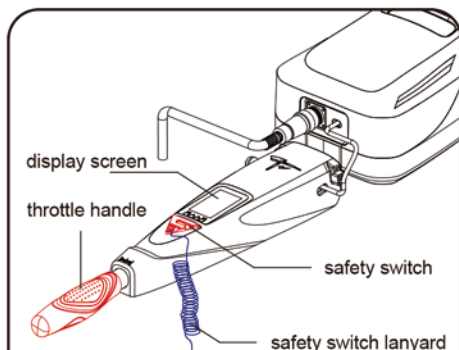

- 1 Place the safety switch in the position shown in the figure.
- 2 Tie the lanyard of the safety switch to the operator's wrist or on the clothing.
- 3 Turn the throttle handle to power on. At the same time, it can control forward (turn left) or backward (turn right).

display screen

speed display

Alternately display:
running time (h)
battery voltage (v)

When the handle
needs to be reset,
it flashes

It lights up when
an alarm occurs



Power (W)

It flashes when
the safety switch
is not connected

Cumulative
running time (h)

When an alarm occurs,
display the error code


1. OK button: In the shutdown state, press and hold to start up. In the startup state, press and hold to shut down. Short press to immediately refresh the screen display.
2. After pressing and holding the "+" button, press the "-" button (for more than 10 seconds), and then the handle calibration will be carried out.
3. Press the SET button (for more than 10 seconds) to clear the alarm.

Fault Code Analysis and Suggested Solutions



serial number	Screen fault display	fault analysis	Suggested Solutions
1	A01:The motor is not connected.	The motor cable is disconnected from the display board.	After confirming that the cable is restored and connected, the fault display will automatically disappear. Otherwise, since it is impossible to determine the problems of the display board circuit and the motor circuit, it needs to be returned to the factory for after-sales service.
2	A02:The battery is not connected.	The battery is disconnected from the display board.	After confirming that the battery is restored and connected, the fault display will automatically disappear. If the display still exists, further confirm whether a battery certified by Feibot has been used. Otherwise, it needs to be returned to the factory for after-sales service.
3	A03:The handle is abnormal.	The rotation of the handle cannot be detected by the controller.	Confirm that the encoder chip is reliably connected to the display board. Otherwise, it needs to be returned to the factory for after-sales service.
4	B01:Motor overheat alarm.	The current operating temperature of the motor exceeds the standard temperature range. Continued operation will cause shutdown due to high temperature protection.	Reduce the throttle and run until the high temperature alarm stops, or shut down and cool for a period of time and restart the machine.
5	B02:The motor shuts down due to high temperature.	The operating temperature of the motor exceeds the required maximum temperature. The product shuts down protectively.	Restart the machine after cooling for a period of time.
6	C01:Abnormal switch status.	Cable malfunction or the switch button fails to reset properly.	After confirming that the button wiring is correct and ensuring that the button can be turned on and off normally, if the alarm still shows, it needs to be returned to the factory for after-sales service.
7	B03:Abnormal operation status 01.	Stalled rotation or overcurrent fault. The propeller is obstructed in operation due to being entangled with grass or fishing nets, etc.	Clean it and restart the machine.
8	B04:Abnormal operation status 02.	Power over - voltage. Non - specified - manufacturer batteries were used, or the battery specifications were used incorrectly and are higher than the product's operating voltage range.	Select the specified battery brand and connect the battery of the specified specification as required.
9	B05:Abnormal operation status 03.	Power under-voltage. The battery is discharged and the voltage is too low. Non-specified-manufacturer batteries were used, or the battery specifications were used incorrectly and are lower than the product's operating voltage range.	Use the battery again after it is fully charged.

04 / Start Operation Instructions




Front control

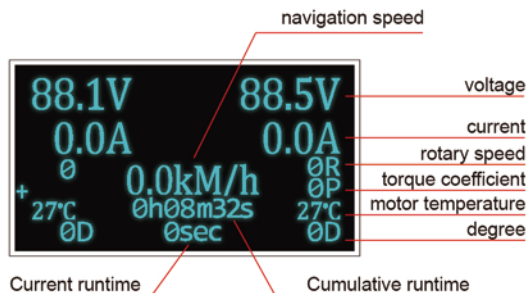


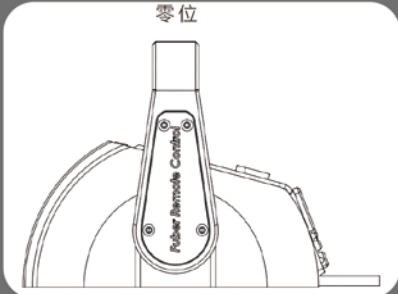
(The current screen shows dual - drive. When it's in single - drive mode, only the value on one side is displayed.)

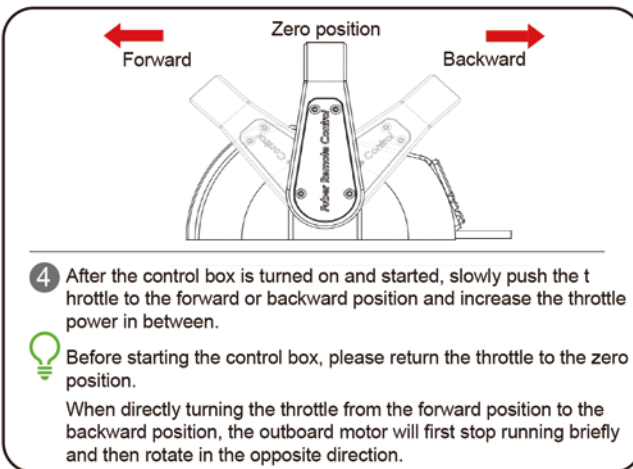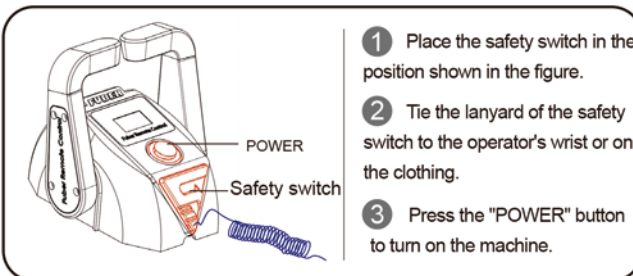

05 / Shutdown Operation Instructions

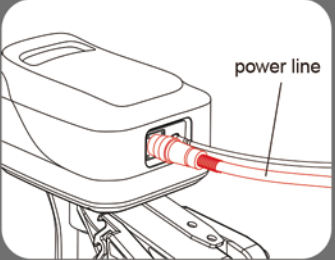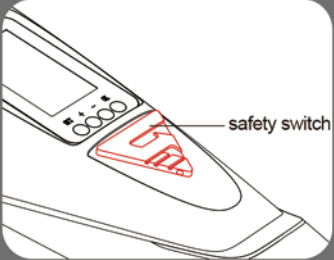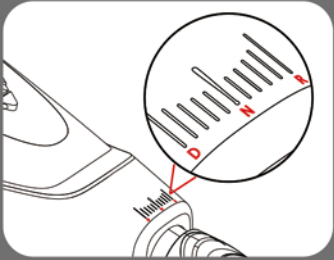

- 1 Turn the throttle handle to the N (Neutral) position.
- 2 Pull out the safety switch.
- 3 Unplug the power cord.





- 1 Push the throttle handle to the zero position.
- 2 Pull out the safety switch.
- 3 Press the "ON/OFF" button to turn off the device.

! In an emergency situation, such as falling into the water, the safety switch can be directly pulled out to stop the machine.

06/Operating Instructions For Raising The Fuselage

- ⚠** a. Only when the outboard motor is stopped can the tilt angle of the outboard motor be adjusted.
b. During the process of adjusting the angle, please operate slowly when tilting up and down to avoid collision damage to people or the machine.
c. When testing the working condition of the tilt angle, please increase the speed slowly and observe the water flow at the stern at any time. If the water flow is abnormal (such as cavitation of water flow, etc.), please stop the machine immediately and reduce the pitch angle.

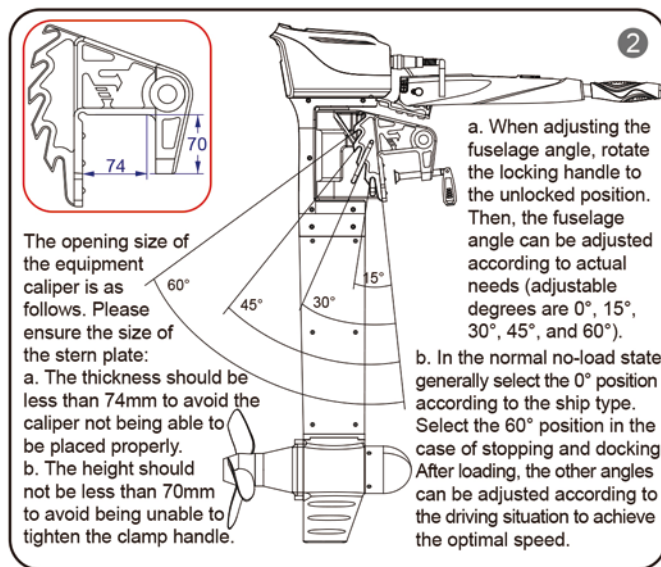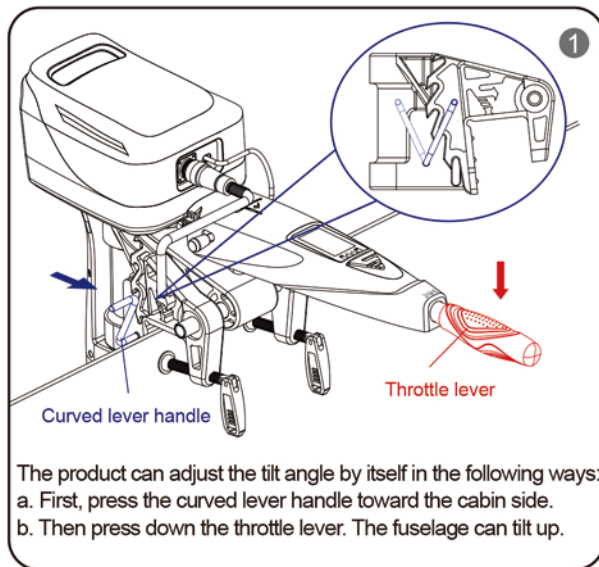


07 / Disassembly And Instructions For Sacrificial Anode


Instructions:

When the corrosion of the sacrificial anode reaches a certain degree, it should be replaced. The process of replacing the anode is relatively simple and usually involves removing the old anode and installing a new one. However, before proceeding with the replacement, it must be ensured that the new anode is ready and meets the requirements. In addition, checking the corrosion condition of the metal structure is also an important step to ensure that the performance of the anode is not impaired.

Remove the sacrificial anode with a 17mm socket

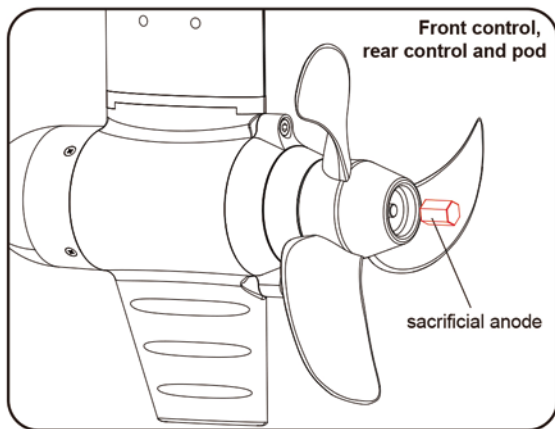

After unscrewing the screw with an M3 Allen wrench, take out the sacrificial anode.

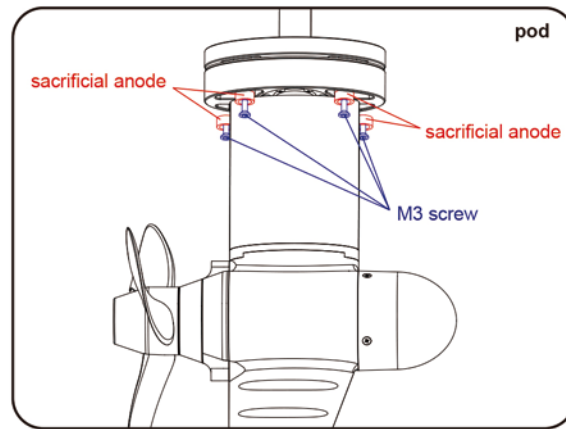

08/ Fault Protection And Recovery Operation Instructions

This product is equipped with a protection function. If the propeller stops rotating due to incorrect operation of the machine, turn the throttle handle to zero position and wait for 2 seconds. Then rotate the throttle again and the machine can be restarted.

Situations that generally cause the propeller to stop rotating are as follows:

- a. The safety switch falls off during operation.
- b. The propeller is blocked due to being tangled with grass or foreign objects.
- c. The throttle handle is not in the zero position when the machine is restarted.
- d. During operation, the forward - backward gear is switched for more than 2 seconds and the throttle handle is not returned to the zero position.

The above are common situations for shutdown. After such situations occur, perform the restart operation. If the machine cannot be restarted, please contact the dealer or agent for handling. Do not disassemble the machine by yourself to avoid danger.

09 / Storage Instructions

If the outboard motor needs to be stored for a long time (more than 2 months), it is recommended to contact your agent before storage for an inspection and clean the outboard motor once to prevent corrosion by seawater. Then, use the original factory packaging scheme at the time of shipment to package the outboard motor for long-term storage.



- a. Please be sure to take shock absorption and protection measures before storing and transporting the outboard motor. During the process, please ensure that the outboard motor is placed flat.
- b. Please store the outboard motor in a dry and ventilated place and avoid direct sunlight.

When placing it temporarily, place the outboard motor flat on the ground. Use the pearl cotton or foam board in the packaging to pad under the machine to avoid damaging the outboard motor.

10 / Maintenance And Repair Instructions

Notes:

Do not start the outboard motor on the shore or in shallow water, and adjust the outboard motor to the highest 73° gear to avoid touching the bottom. Wait until the water depth is sufficient to use the outboard motor, and then adjust the outboard motor to the appropriate gear to start.

After using this product in seawater, please promptly clean the immersed parts with fresh water to reduce corrosion.




- a. Please be sure to carry out maintenance under the operation guidance of professionals or agents.
- b. Please be sure to perform maintenance or repair when the outboard motor power is off.
- c. If the parts of the product are damaged or need to be replaced, please be sure to use the original accessories of Fibos Technology.
- d. At any time when checking and disassembling the propeller, please ensure that the power is disconnected to prevent accidental startup of the machine.


Propeller inspection steps:

- a. Check the wear and corrosion of the propeller blades.
- b. Remove the entangled debris on the propeller (such as fishing nets, fishing lines, aquatic plants, etc.).

Drilling holes in the pod-boat plate.

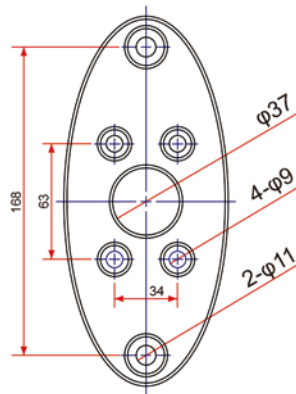


Drilling holes in the full-swing pod-boat plate.

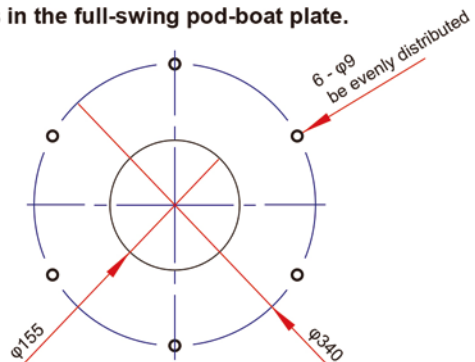

Product identification nameplate:

The product nameplate is the proof for product warranty or other after-sales services. It is located as shown in the figure below. Please find the face sticker on the product and record the product serial number. Do not tear off the face sticker; otherwise, the product warranty will be invalid.

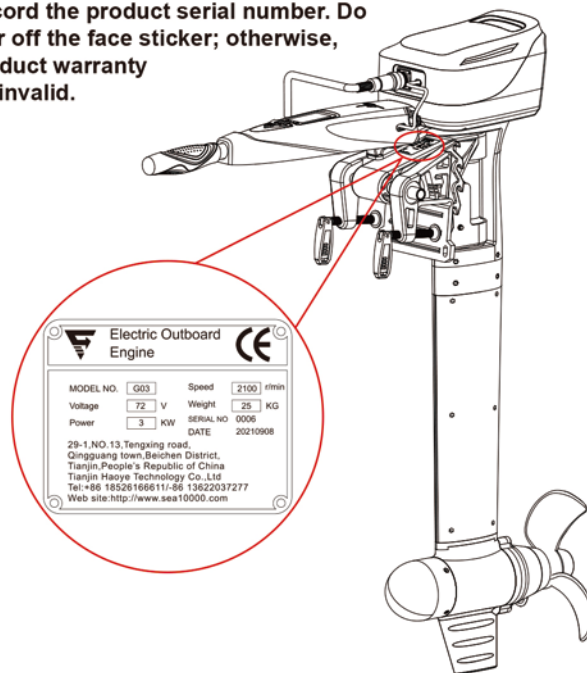



contact number: 400-090-3969

official website: <http://www.sea10000.com/>

company address: GuChuan High-tech Industrial Park#29,Beichen District,Tianjin